

Installation and Service Instructions for 87,000; 87,100; 87,200; 87,400 and 87,600 Series

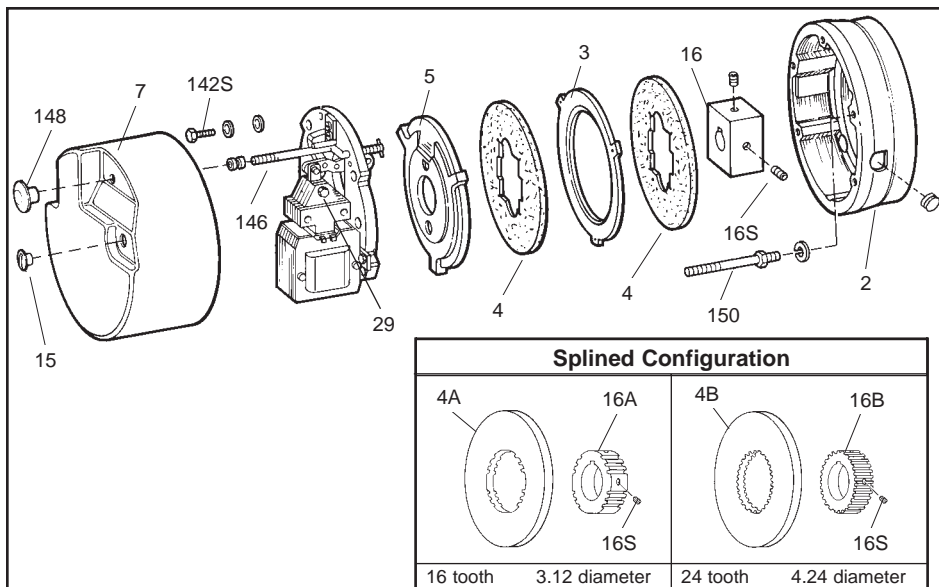


Figure 1

Important

Please read these instructions carefully before installing, operating, or servicing your Stearns brake. Failure to comply with these instructions could cause injury to personnel and/or damage to property if the brake is installed or operated incorrectly. For definition of limited warranty/liability, contact Rexnord Industries, LLC, Stearns Division, 5150 S. International Dr., Cudahy, WI 53110, (414) 272-1100.

Caution

1. Installation and servicing must be made in compliance with all local safety codes including Occupational Safety and Health Act (OSHA). All wiring and electrical connections must comply with the National Electric Code (NEC) and local electric codes in effect.
2. Use of this brake in atmospheres containing explosive gases and dusts must be in accordance with NEC article 501. this brake is not suitable for use in certain atmospheres containing explosive gases and dusts. **HazLoc** inspection authorities are responsible for verifying and authorizing the use of suitable designed and installed **HazLoc** equipment. When questions arise consult local **Authority Having Jurisdiction (AHJ)**.
3. To prevent an electrical hazard, disconnect power source before working on the brake. If power disconnect point is out of sight, lock disconnect in the off position and tag to prevent accidental application of power.
4. Make certain power source conforms to the requirements specified on the brake nameplate.
5. Be careful when touching the exterior of an operating brake. Allow sufficient time for brake to cool before disassembly. Surfaces may be hot enough to be painful or cause injury.

6. Do not operate brake with housing removed. All moving parts should be guarded.
7. Installation and servicing should be performed only by qualified personnel familiar with the construction and operation of the brake.
8. For proper performance and operation, only genuine Stearns parts should be used for repairs and replacements.
9. After usage, the brake interior will contain burnt and degraded friction material dust. This dust must be removed before servicing or adjusting the brake.
DO NOT BLOW OFF DUST using an air hose. It is important to avoid dispersing dust into the air or inhaling it, as this may be dangerous to your health.
 - a. Wear a filtered mask or a respirator while removing dust from the inside of a brake.
 - b. Use a vacuum cleaner or a soft brush to remove dust from the brake. When brushing, avoid causing the dust to become airborne. Collect the dust in a container, such as a bag, which can be sealed off.
10. Do not run motor with the brake in the manual release position to avoid overheating of friction disc.
11. Do not lubricate any parts of the brake.
12. Do not adjust brake torque. The nominal static torque is factory pre-set and should not be altered.

General Description

The 87,X00 Series is a spring-set, electrically released disc brake for controlled stopping and holding of a load. It is self-adjusting for friction disc wear and mounts directly to a NEMA C-face motor with 8-1/2" (AK) register and a 7-1/4" (AJ) bolt circle.

The 87,100 Series Brake mounts to a

10-1/2" AK diameter register and 9" (AJ) bolt circle.

The brake is provided with a manual release lever or rod. When the motor is off and the load is to be moved without energizing the motor, the manual release lever or rod should be used. This removes the holding torque from the motor shaft, allowing it to be rotated by hand, however drag may be noted. The brake will remain in the manual release position until the release lever or rod is returned manually to its set position, or until the brake is re-energized electrically and the release lever or rod returns to its set position automatically.

Note: Fan-guard mounted brakes requiring IP54 & IP55 protection may require additional sealing measures beyond seals provided with this brake. Pressurized sprays aimed at the fan and brake hub surfaces can result in fluid migration along the motor shaft and keyway, and into the brake. The use of an appropriate sealant such as RTV or a forsheda seal is advised.

I. Installation Procedure - 87,000; 87,100; 87,400 and 87,600

- A. Remove manual release knob (148) (on pull type), housing nuts (15) and housing (7). Housings equipped with side manual release do not have release knob.
 - B. Depress solenoid plunger (29) and pull release rod (146) back to lock brake mechanism in manual release position or wire tie plunger (29) to frame (79). The 87,600 Series Brake, brakes with optional deadman manual release and brakes with optional side manual release, the plunger must be wire tied to the frame.
 - C. Remove entire support plate assembly (142) by evenly unscrewing screw (142S). Remove screws, conical spring washers, and flat washers if supplied.
 - D. Remove pressure plate (5), friction disc (4), and stationary disc (3).
- Note 1:** Brakes with a single friction disc do not have stationary discs. Vertically mounted brakes will have special pins which hold spacer springs and, in some cases, spring washers except one-disc vertical below. Note color coded sequence of springs and location of washers, if used, or refer to Instruction Sheet P/N 8-078-937-05 (Sheet 301.3) for proper assembly of vertical mounting components.
- E. Attach endplate (2) to NEMA C-face of motor using four 1/2" diameter socket head cap screws (not supplied) torque per manufacturer's specifications. (Head of cap screws must not project above friction surface.) If foot mounted, secure foot mounting bracket to foundation. The use of dowels to insure permanent alignment is recommended. Foot, machine or C-face mounted brakes must be carefully aligned within .004" on concentricity and face runout. Shaft runout should be within .002" T.I.R. Maximum permissible shaft endfloat is .020".

Note 2: If motor is to be ceiling mounted after assembly, entire brake will have to be rotated 180° or "upside down" so it will be positioned with solenoid plunger (29) above frame when final assembly is mounted on ceiling. Similarly,

for horizontal wall mounting, rotate 90°.

Note 3: The brake nameplate states mounting position; "horizontal, vertical above or vertical below." The brake must be mounted in that position. Horizontal brakes rated 35 lb-ft and less do not require modification to be mounted vertical below.

Note 4: A dimple drilled into the motor shaft for the hub set screw (16S), 90° from the key is recommended for vertical mounting.

F. Position hub (16) and key (by customer) on the motor shaft so outboard face of hub will protrude approximately 1/32" to 1/16" beyond face of last outboard friction disc. (Position may be determined by assembling friction disc(s) and stationary disc(s) onto hub, noting hub position, and removing disc(s).

Torque set screw (16S) as follows: 5/16 diameter - 13 ft-lb, 3/8 diameter - 24 ft-lb and 1/2 diameter - 52 ft-lb. If brake utilizes vertical mounting springs, do not assemble them when measuring for hub location.

G. Reassemble friction disc (be sure friction discs slide freely), spring (if vertical), stationary discs, and pressure plate in correct sequence and position. All parts must slide freely. The universal mounting pressure plate presently used has three tapered reliefs on outboard face. However, some older brakes used a pressure plate with a single tapered relief marked top, which must be installed with relief facing manual release rod (146).

H. Mount support plate assembly, torque screws to 50 in-lbs in endplate. Conical spring washer installed under the screw head. Flat washer used under the conical spring washer only with aluminum support plate. Be sure that assembly is mounted with the solenoid in a vertical position (plunger above frame) as shown when brake is horizontal. If release rod (146) is not in manual release position and has allowed the mechanism to overadjust, it will have to be reset before mounting support plate. In this case, the lever arm (17) throat will be near, or touching, the pinion (32) teeth. Refer to Figure 6 and *Self-Adjust Maintenance*. Loosen pressure spring cap screw (19) until pressure spring (11) is free, mount support plate assembly to endplate and retighten spring cap screw until snug. Do not overtighten! Torque to a maximum of 8 ft-lbs.

I. Manually lift solenoid plunger to maximum travel, and release. Complete electrical connection. (See Section on *Electrical Connection of Brake*.) Depress solenoid plunger manually or electrically, and allow it to snap up. Repeat this process several times to set air gap on solenoid. (Check *Self-Adjust Maintenance* Section for proper gap measurement, or corrective action of improper gap.)

J. Replace housing, nuts and manual release knob.

II. Installation Procedure - 87,200 (See Figure 1A)

As shown in the exploded view, Figure 1A, the 87,200 Brake is very similar to the motor mounted 87,000 Series. It is, however, a self-supported, foot mounted unit, with an integral bearing supported through-shaft. Since disassembly is not required prior to mounting, installation is simplified.

A. Bolt foot mounting bracket (34) to foundation uses four 3/8-16 cap screws and lock washers (not supplied). Torque cap screws to 110 ft-lb specifications. Dowels are recommended to maintain alignment.

B. For reference purposes, the endplate mounting bolts, 1A, are torqued to 100 - 110 lb-ft.

C. Do not exceed maximum overhung, or side load ratings on output shafts. 100 lbs. on housing end of brake, 150 lbs. on endplate/foot stand end of brake. (Measured at 1" from end of shaft).

D. See Section *Electrical Connection of Brake*.

Note: To remove housing for servicing of the brake it is necessary to loosen the eccentric bearing sleeve. Loosen the set screw on the sleeve (35S) and, using a 3/16" drift pin, rotate the sleeve on the shaft until loose (about ±20°). Remove the housing nuts (15) and release knob (148), and slide the housing off the shaft. Reverse the procedure for re-assembly.

III. Electrical Connection of Brake - All Models

CAUTION 1: Inverter Motor and Special Control Systems. This brake contains either a single phase AC coil or DC coil that requires instantaneous power within ± 10% of rating at the coil. A separate power source is required when this brake is used in conjunction with a motor or control system that limits voltage or current input (i.e. inverter motors) or causes a ramping of the power supply.

CAUTION 2: Class H coils with terminals. Do not bend lead wire crimp connection as this causes a fatigue in the metal which may break under vibration.

Note 1: Brake coil connections described here cover common motor connections. For nonstandard motor or control connections, contact respective supplier or Stearns Div.

Note 2: Be sure lead wires to coil are not tight or pinched, and that leads will not be rubbed by friction disc, trapped between solenoid plunger and frame, caught between lever arm and endplate, or by linkage.

Note 3: On brakes with spacer heater, connect to appropriate power source. Heater is to be energized continuously, even during storage or rusting may occur.

A. AC coils, single or dual voltage

1. Dual voltage coils may be factory preconnected for high voltage with wire nuts. Checking coil connection is suggested. On the 87,200 only, coil lead wire termination is accessible at lead wire outlet of endplate (2). Four lead style are marked on leads for connection per Figure 4. Two unmarked leads mean preconnection made for high voltage. If reconnection of a dual voltage

coil is required (two unmarked leads) on the 87,200, housing (7) must first be removed per Section and Figure 1A. Reconnect coil for appropriate voltage as shown in Figure 4. Bring out line leads.

2. On single voltage coils, connect coil to any two leads on single or three-phase motors of the same voltage as the brake. Refer to brake nameplate and coil number for correct voltage and frequency. See Figure 4 for dual voltage coil connection and connect to any two leads of single or three-phase motor of the same voltage. The brake can also be wired to external switch contacts providing proper voltage other than that used to control the motor. Normally, the motor and brake contacts are interlocked.

B. Connecting AC solenoid coils on dual voltage 230/460 three-phase motors

To use a 230 volt coil (or a 230/460 dual voltage coil connected for 230 volts) with a 230/460 dual voltage three-phase motor, the brake leads are connected across two motor terminals as shown in Figures 2 and 3 or other equivalent combinations. If a 230 volt brake coil is connected as shown in Figures 2 and 3 the motor can be operated on either 230 volts or 460 volts with no effect on brake operation.

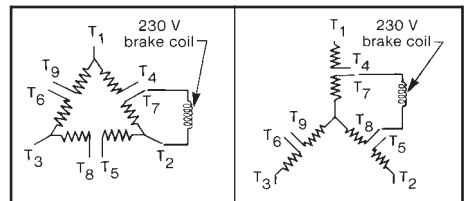


Figure 2

Figure 3

AC Voltage Coil Connection C. DC coils - all models

1. All Stearns DC coils are single voltage dual winding. A high current pull-in winding is initially energized to start the plunger movement, while a low current holding winding is momentarily shunted from the circuit until the plunger has pulled in. The older design incorporated a mechanical switch mounted to the solenoid frame and actuated by an arm mounted to the plunger to bring the holding winding into the circuit. In addition, coils over 48 Vdc have an arc

suppression module in parallel with the switch contacts to protect the contacts from arc erosion and suppress EMI. The polarity of the incoming power supply is immaterial with the mechanical switch. The new electronic switch design incorporates an electronic timing circuit to allow the plunger to pull in, then electrically switch to the holding winding. Polarity of the power supply to the electronic switch and coil must be maintained. Refer to Figure 5 for proper wiring.

Caution! Never use a series resistor to drop power supply voltage to the coil as brake malfunction will result.

2. Due to high initial current demands of a DC solenoid, a separate DC power source

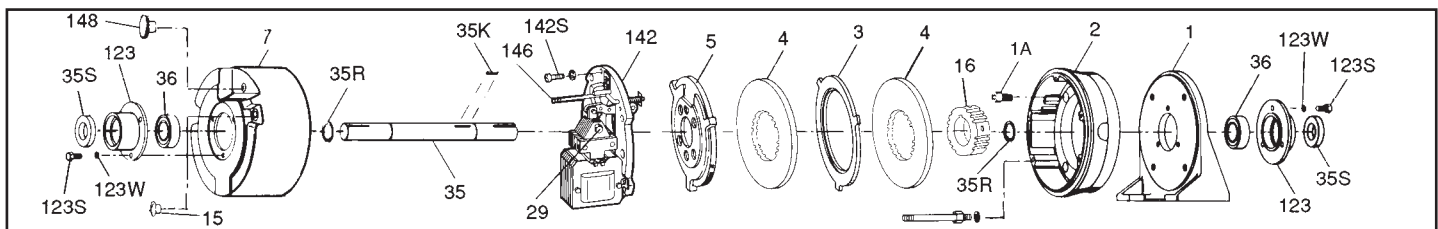


Figure 1A

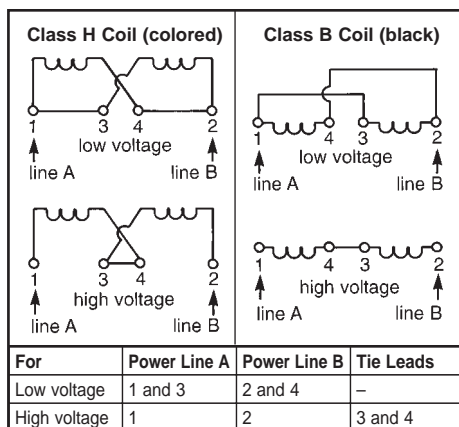


Figure 4

DC Voltage Coil Connection

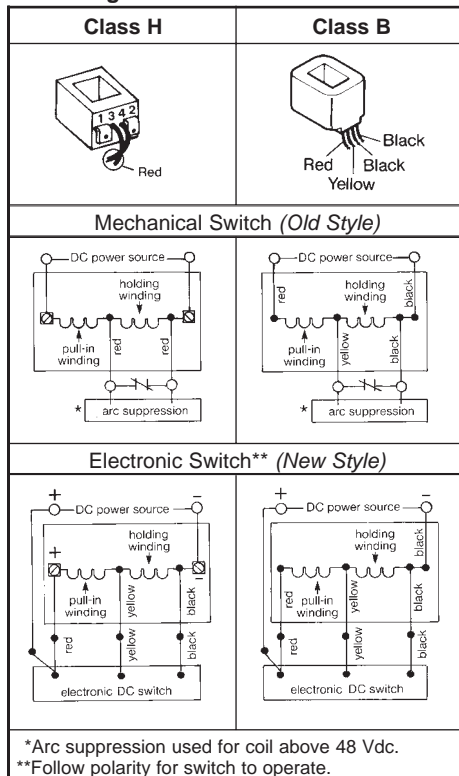


Figure 5

of adequate current capacity is usually required.

Caution! For electrical release of brake, apply full rated coil voltage instantly. Do not increase voltage slowly.

IV. General Maintenance - All Models

Warning! Any mechanism or load held in position by the brake should be secured to prevent possible injury to personnel or damage to equipment before any disassembly of the brake is attempted or the manual release knob or lever is operated on the brake. Observe all cautions listed at the beginning of this manual.

Note 1: Replacement part kits for many items are available and contain retrofit instructions.

Note 2: The 87,400 Maritime Series and 87,600 Navy Brakes as well as the 87,000 Marine Duty Brakes, though similar in construction to the standard 87,000 Series commercial brakes, utilize special materials such as brass, bronze, ductile iron, etc. To obtain correct replacement parts for the Series 87,000 Marine Duty or the Series 87,400 and 87,600 Brakes, obtain brake serial number and consult factory.

A. Coil replacement - all models

All standard NEMA AC voltage coils are available in kits. Select coil kit from appropriate replacement parts list for the particular brake series being serviced.

All standard NEMA DC voltage coils are available in assemblies and may also be obtained from appropriate parts list.

B. Friction disc replacement - all models

Note: Replace friction disc in single disc brakes when wear surface area is one-half the original disc thickness. In multiple disc brakes, replace all friction discs when throat of lever arm (17) is within 1/16" of touching teeth of pinion (32).

1. Observe cautions and warnings preceding *Installation Procedure*, in Section I, Follow Step A, then disconnect solenoid lead wires.
2. Continue with Steps B through D and Steps G through J. Be sure to reconnect coil leads before replacing housing (J).

C. Self-adjust maintenance (See Figure 6)

Since the self-adjust brake automatically adjusts itself for friction disc wear, maintenance is held to a minimum. The solenoid is factory set with a 13/16" to 15/16" air gap, and requires no resetting, even when changing friction discs.

Measure air gap with brake fully assembled without housing.

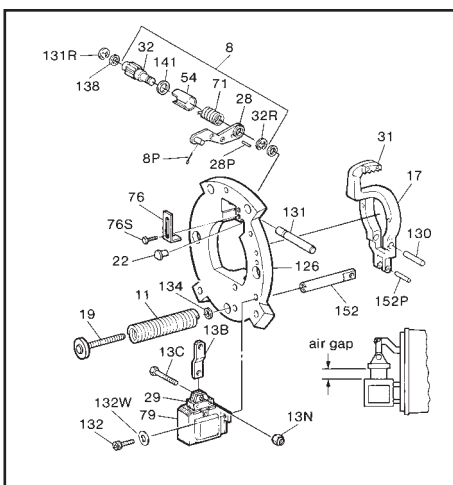


Figure 6

Note: To measure solenoid air gap on vertically mounted brakes, grasp solenoid link to hold plunger in a free horizontal position and move toward solenoid frame until spring pressure is felt. Holding firmly in this position, measure air gap between mating (ground) surface on solenoid frame and solenoid plunger. Adjust to proper gap and check gap by again holding plunger as directed.

The gap is determined by the position of wrap spring stop (76). The normal operating gap is 13/16" to 15/16". Should this change, follow the steps listed:

1. If (stop) screws (76S) had been loosened and retightened, the air gap may require resetting. The gap is measured between mating surfaces of plunger (2) and solenoid frame (79), and may be increased by raising slightly, or decreased by lowering slightly, wrap spring stop (76). Be sure to retighten (stop) screws (76S). Manually lift plunger to maximum travel and release. Depress plunger, manually or electrically, and allow it to snap up. Repeat several times, then recheck air gap. (For vertically mounted brakes refer to Note in Section IV under Item C).

2. Tang of wrap spring (71) must be below, and must make contact with, wrap spring stop (76) when solenoid lever (28) is manually raised. If stop is bent outward, allowing tang to bypass it, rebend to square position, assemble correctly, and reset solenoid air gap as described in Paragraph 1.

3. Should air gap disappear due to overheating, oil or other lubricant may have been applied to solenoid lever and pinion assembly (8). Remove support plate assembly (142). Loosen pressure spring nut (19) until pressure spring (11) is free. Remove cotter pin (8P) from solenoid lever (28) and retaining ring (131R) from pivot pin (131). Note location of spacer washer (138) if used, and push pivot pin out to free affected assembly. Remove retaining ring (32R) from pinion (32) and disassemble. Parts should be thoroughly cleaned in M.E.K. or equivalent solvent that does not leave a film. Dry all parts thoroughly and reassemble. Rotate pinion and wrap spring clockwise until tang (A) is aligned with centerline of the upper hole of the lever arm. Refer to Figure 7. Reassemble in reverse order. Do not retighten cap screw (19) until support plate assembly is mounted on endplate. Refer to Steps H and I of *Installation Procedure* to complete assembly.

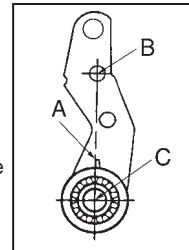


Figure 7

4. Check condition and positioning of pinion (32) and rack (part of lever arm assembly, 17). Replace parts as necessary with complete assemblies. See following Sections.

D. Solenoid lever and pinion assembly replacement - all models except Series 87,600

If pinion (32) teeth are worn, replace entire assembly (8). Consult appropriate parts list for kit number. Check sector gear of lever arm (17) for wear.

E. Lever arm replacement - Series 87,000; 87,100 and 87,200 only

If sector gear teeth of lever arm (17) are worn, replace entire lever arm assembly available as a kit from appropriate repair parts list. Also check pinion (32) teeth for wear. See Item 8. Do not attempt to use this aluminum lever arm with Series 87,400 (Maritime) and Series 87,600 (Navy) Brakes.

F. Pressure spring stud and nut replacement - Series 87,000; 87,100; 87,200 and 87,400

On older designs of above brakes, Item (152) was threaded shoulder stud, Item (152P) was a solid pin. These items have been replaced by a spring tube, cap screw and spring pin. Replacement of any individual component requires replacement of all three older style components. Consult appropriate repair parts list for complete retrofit kit. The 87,600 (Navy) Brake uses the pressure spring stud and nut arrangement. Consult appropriate master plan drawing for piece part numbers.

V. Troubleshooting

A. If brake does not stop properly or overheats, check the following:

1. Is manual release engaged, and is motor energized?
2. Friction discs may be excessively worn, charred or broken.
3. Hub may have become loose and shifted

on shaft.

4. Is hub clean and do friction discs slide freely.
5. Are controls which govern start of braking cycles operating properly?
6. Are limit switches, electric eyes, etc. functioning properly?
7. On vertically mounted brakes, are springs in place of disc pack? See P/N 8-078-937-05 (Sheet 301.3).
8. If brake is floor mounted, check alignment. See Section I, Step E.
9. Pressure spring may be improperly assembled or broken.
10. Is solenoid air gap adjusted correctly? See *Self-Adjust Maintenance*, Section IV, Item C.
11. Check linkage for binding. The approximate pressure applied to the top of the solenoid link to move plunger is:

#5 coil	3 lbs
#6 coil (15 lb-ft)	5-1/2 lbs
#6 coil (25 lb-ft)	9 lbs
#8 coil	16 lbs

If excessive force is required, determine cause of binding and correct. Do not overlook bent, worn or broken plunger guides as a possible cause for binding.

12. Solenoid lever stop (22) must be in place on support plate.
13. Solenoid may not be energizing and releasing the brake. Check voltage at the coil and compare to the coil and/or nameplate voltage rating.
14. Whether brake is AC or DC a voltage drop may be occurring. If excessive drop in voltage is noted, check wire size of power source. Correct as needed.

Note: A method to check voltage at coil is to insert a block of wood of the approximate thickness of the solenoid air gap between the solenoid frame and plunger. (The block will prevent brake from releasing when coil is energized.) Connect voltmeter leads at the coil terminals or lead wires. Energize coil. Voltmeter needle will not fluctuate and reading can be taken. Reading should be taken immediately and the coil de-energized to prevent overheating of the coil. Compare voltage reading with coil rating.

15. If brake is DC solenoid style, check switch actuation and condition of coil. The switch should open with the following approximate air gap. (This is plunger travel remaining before plunger seats to frame.) Solenoid size is used for reference:

#5 or #8 solenoid	3/16" to 7/32"
#6 solenoid	7/32" to 1/4"

If actuating arm is bent, replace plunger. Check switch contacts. If pitted, replace switch.

16. Check slots of endplate for wear at the areas where stationary discs are in contact. Grooves in the slots can cause hang-up or even breakage of ears of stationary discs. If grooving is noted, replace endplate.
17. Check that heads of mounting bolts do not extend above wear surface of endplate.

18. On vertical brakes with cast iron endplates, check the vertical mounting pins to be sure shoulder of pin is flush with wear surface of endplate. Be sure pins are straight and pressure plate and stationary disc(s) are free to slide on the pins. Be sure springs and spacers are installed in proper order. See P/N 8-078-937-05 (Sheet 301.3).

19. Check pressure spring length to insure correct compressed height. Original spring lengths are given in the following Table so that correct setting may be verified and corrected if necessary. With worn friction discs, add amount of wear to the approximate spring length shown.

Color	Torque (lb-ft)	Compressed Spring Length
Blue	10	3-5/16"
Yellow	15	3-9/16"
Red	25 & 50	3-3/8"
Green	35, 75 & 105	3-3/8"
Black	10	3-1/4"
White	15	3-1/4"
Orange	25 & 50	3-1/4"
Purple	35, 75 & 105	3-1/4"

20. If a heater is supplied and excess rusting has occurred in brake, check power source to heater to be sure it is operating and that heater is not burned out.
21. If stopping time is more than two seconds (rule of thumb), the brake torque rating may be insufficient. If the brake stops high inertial loads and/or brake stops more than five times per minute, check thermal requirements of application versus thermal capacity rating of brake.
22. Use Loctite® 242 to secure link screw nut (13N) to link screw (13C) if vibration causes nut to loosen.

B. If brake hums, solenoid pulls in slowly, or coil burns out, check the following:

1. Voltage supply at coil versus coil rating.
2. Is solenoid air gap excessive? See *Self-Adjust Maintenance*.
3. Shading coils may be broken.
4. Plunger guides may be excessively worn. Does solenoid plunger rub on solenoid frame laminations? If so, replace plunger guides.
5. Solenoid frame and plunger may be excessively worn.
6. Is solenoid dirty?
7. Solenoid mounting screws may have become loose, causing frame to shift and plunger to seat improperly.
8. Sector gear and pinion teeth may be jamming due to excessive tooth wear.
9. Excessive voltage drop when motor starts. Check size of lead wires for motor starting current and solenoid inrush current. See Section V-A, Items 11, 12, 14 and 15.

C. If brake is noisy during stopping:

1. Check mounting face runout, mounting rabbit eccentricity and shaft runout. See *Installation Procedure*, Section I, Step E. Correct as required.
2. Check for signs of the outside diameter of the friction disc(s) rubbing on the inside

diameter of the endplate. This would indicate brake is eccentric with respect to the motor shaft and/or the shaft is deflecting during a stop. Check alignment and shaft diameter. Also check for worn motor bearings. If realignment does not correct the problem, a larger diameter shaft may be required. Shaft deflection may also be caused by excessive overhang of brake from motor bearing. Additional shaft support may be required.

3. In cases where motor shaft extends through a fan casing or guard, the clearance hole may not be adequate. Rubbing of the shaft may occur causing a noise during a stop. If required, enlarge clearance hole.
4. Check for bad motor bearings. Replace if necessary. Check for excessive shaft endfloat. Correct as required.

Parts List for 87,000 and 87,100 Series Brakes




REV. A AND PRE-REVISION CONTROL (formerly Sheet 363.1)

Information required when ordering replacement parts:

- Give part number of parts or kits needed, brake model number, and brake serial number. The brake model and serial number may identify special brakes not covered by this parts list.
- Description items in ***CAPITALIZED BOLD ITALICS*** are recommended spare parts. One set per 5 brakes in service is recommended.
- Enclosures are designated as follows: **O** = Standard **E** = Dust-tight, waterproof (DTWP)
 - For 87,100 Series see Table 3.
- ◯Circled items are contained in kit Item A, Table 4.

For installation and service instructions, see P/N 8-078-927-00

Detailed service instruction sheet is included with each kit.

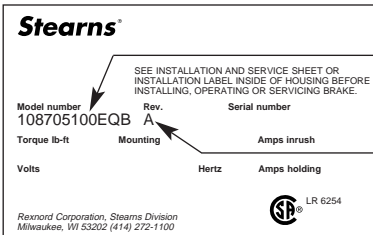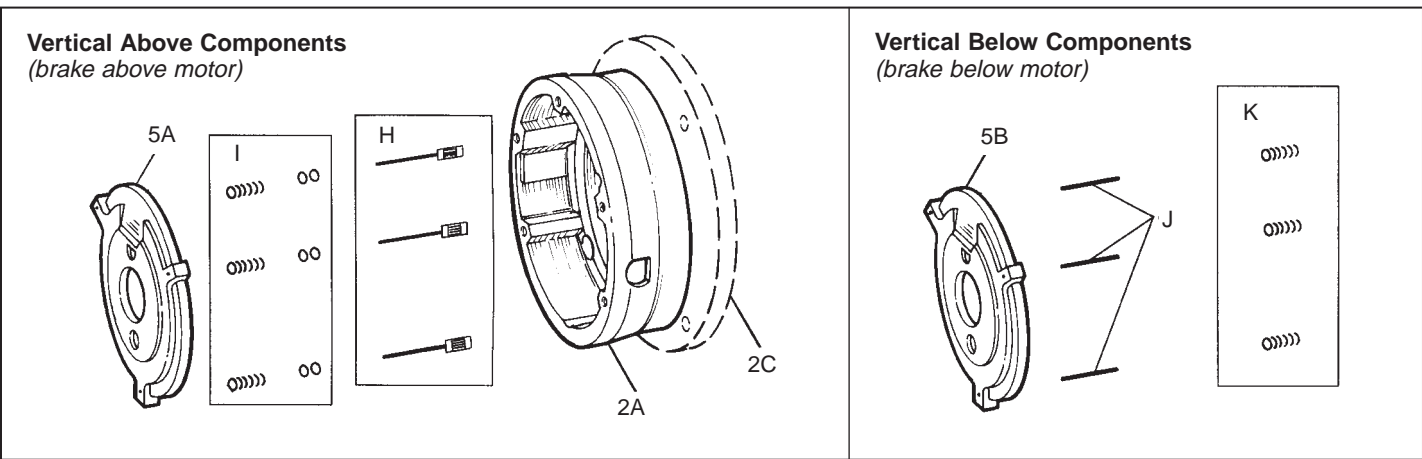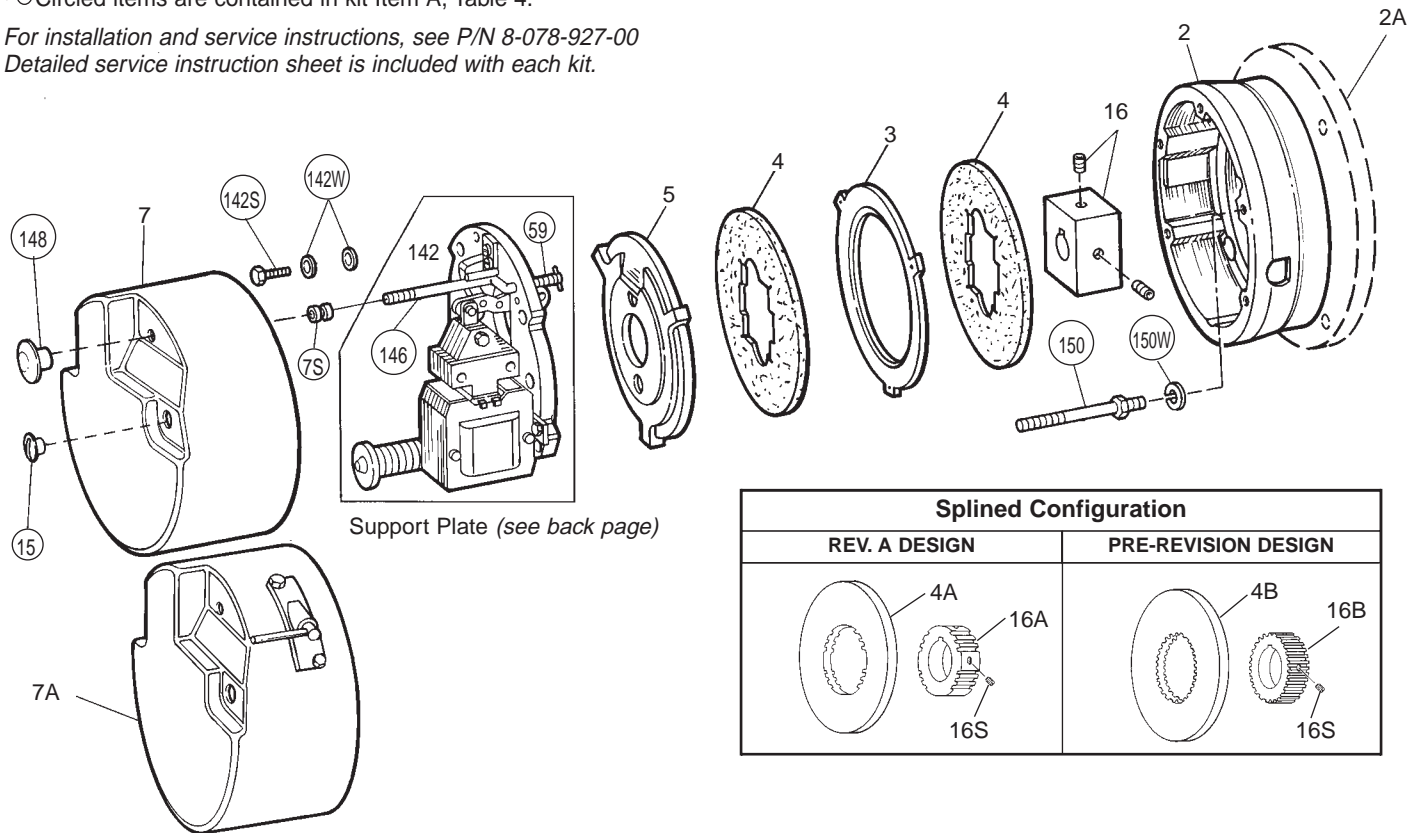

Note:

MODEL NUMBER
will appear on brake nameplate.

REVISION CONTROL
(if applicable) and brake serial number.

			Torque (lb-ft)	6		10		15		25		35		50		75		105																	
			Current	AC	DC	AC	DC	AC	DC	AC	DC	AC	DC	AC	DC	AC	DC	AC	DC																
			Enclosure	O	E	O	E	O	E	O	E	O	E	O	E	O	E	O	E																
			Brake Model Number →	1-087-001-00	1-087-002-00	1-087-005-00	1-087-006-00	1-087-011-00	1-087-012-00	1-087-015-00	1-087-016-00	1-087-021-00	1-087-022-00	1-087-025-00	1-087-026-00	1-087-031-00	1-087-035-00	1-087-036-00	1-087-041-00	1-087-042-00	1-087-045-00	1-087-046-00	1-087-051-00	1-087-052-00	1-087-055-00	1-087-056-00	1-087-061-00	1-087-062-00	1-087-065-00	1-087-066-00	1-087-081-00	1-087-082-00	1-087-085-00	1-087-086-00	
Item	Description	Part Number ↓	1-087-001-00	1-087-002-00	1-087-005-00	1-087-006-00	1-087-011-00	1-087-012-00	1-087-015-00	1-087-016-00	1-087-021-00	1-087-022-00	1-087-025-00	1-087-026-00	1-087-031-00	1-087-035-00	1-087-036-00	1-087-041-00	1-087-042-00	1-087-045-00	1-087-046-00	1-087-051-00	1-087-052-00	1-087-055-00	1-087-056-00	1-087-061-00	1-087-062-00	1-087-065-00	1-087-066-00	1-087-081-00	1-087-082-00	1-087-085-00	1-087-086-00		
A 7 7 7A	HARDWARE KIT Housing and grommet assembly Housing and seal assembly Housing assembly – side manual release	5-66-1007-00 5-07-7010-00 5-07-7012-00 5-07-7051-00	1 1 1	1 1 1	1 1 1 1	1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1			
not shown not shown	GASKET AND SEAL KIT Pipe plug (drain)	5-66-1271-00 9-33-0325-00	1 1	1 1	1 1	1 1	1 1	1 1	1 1	1 1	1 1	1 1	1 1	1 1	1 1	1 1	1 1	1 1	1 1	1 1	1 1	1 1	1 1	1 1	1 1	1 1	1 1	1 1	1 1	1 1	1 1	1 1	1 1	1 1	
5 4 4 3	PRESSURE PLATE KIT FRICTION DISC KIT – STANDARD FRICTION DISC STATIONARY DISC KIT (HORIZONTAL & VERTICAL)	5-66-8571-00 5-66-8472-00 8-004-702-00 5-66-8372-00	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1	1 1 1 1		
16	Hub and set screw assembly (1-disc brake) Hub and set screw assembly (2-disc brake) Hub and set screw assembly (3-disc brake) Hub and set screw assembly (1-disc brake) Hub and set screw assembly (2-disc brake) Hub and set screw assembly (3-disc brake)	5-16-7101-00* 5-16-7103-00* 5-16-7105-00* 5-16-7102-00* 5-16-7104-00* 5-16-7106-00*	1 	1 	1 	1 	1 	1 	1 	1 	1 	1 	1 	1 	1 	1 	1 	1 	1 	1 	1 	1 	1 	1 	1 	1 	1 	1 	1 	1 	1 	1 	1 	1 	1
2	Endplate Endplate Endplate Endplate and oil seal assembly Endplate and oil seal assembly Endplate and oil seal assembly	5-02-7001-01 5-02-7002-01 5-02-7003-01 5-22-7001-00 5-22-7003-00 5-22-7005-00	1 	1 	1 	1 	1 	1 	1 	1 	1 	1 	1 	1 	1 	1 	1 	1 	1 	1 	1 	1 	1 	1 	1 	1 	1 	1 	1 	1 	1 	1 	1 	1 	1
142**	Support plate assembly (AC) Support plate assembly (AC) Support plate assembly (AC) Support plate assembly (AC) Support plate assembly (AC) Support plate assembly (DC) Support plate assembly (DC) Support plate assembly (DC) Support plate assembly (DC) Support plate assembly (DC)	5-42-7089-00 5-42-7091-00 5-42-7093-00																																	

**Coil is separate. Consult factory for support plate assembly part number with the side manual release option.

TABLE 2: Components of Support Plate and Coil Assembly

Item	Description		Part Number	Torque (lb-ft)								
				6 10	15	25 50	35 75 105					
126	Support plate and bearing assembly Support plate and bearing assembly		5-26-7007-00 5-26-7008-00	1	1	1	1					
8 17 19 & 152	SOLENOID LEVER AND PINION KIT Lever arm kit Pressure spring tube kit		5-66-7371-00 5-66-7271-00 5-66-7471-00	1 1 1	1 1 1	1 1 1	1 1 1					
11	Pressure spring kit – black (<i>formerly blue</i>) Pressure spring kit – white (<i>formerly yellow</i>) Pressure spring kit – orange (<i>formerly red</i>) Pressure spring kit – purple (<i>formerly green</i>)		5-66-3072-00 5-66-3074-00 5-66-3076-00 5-66-3078-00	1	1	1	1					
AC Brakes												
U	NO. 5 SOLENOID KIT NO. 6 SOLENOID KIT NO. 8 SOLENOID KIT		5-66-5051-00 5-66-5061-00 5-66-5081-00	1	1	1	1					
13B	Solenoid link Solenoid link		8-013-703-00 8-013-704-00	1	1	1	1					
13C	SOLENOID LINK CAP SCREW SOLENOID LINK CAP SCREW SOLENOID LINK CAP SCREW		8-157-701-00 8-157-702-00 8-157-703-00	1	1	1	1					
V	NO. 5 COIL KIT 60 HZ	115/230 Vac 230/460 Vac 115 Vac 230 Vac 460 Vac 575 Vac	5-66-6507-33 5-66-6509-33 5-66-6501-33 5-66-6502-33 5-66-6504-33 5-66-6505-33	1 1 1 1 1 1								
		NO. 6 COIL KIT 60 HZ	115/230 Vac 230/460 Vac 115 Vac 230 Vac 460 Vac 575 Vac	5-66-6607-33 5-66-6609-33 5-66-6601-33 5-66-6602-33 5-66-6604-33 5-66-6605-33		1 1 1 1 1 1	1 1 1 1 1 1					
			NO. 8 COIL KIT 60 HZ	115/230 Vac 230/460 Vac 115 Vac 230 Vac 460 Vac 575 Vac	5-66-6807-33 5-66-6809-33 5-66-6801-33 5-66-6802-33 5-66-6804-33 5-66-6805-33				1 1 1 1 1 1			
				X		Brake release interlock switch		5-57-5528-00	1	1	1	1
				DC Brakes								
				W	Electronic DC switch kit	24/28 Vdc 115 Vdc 230 Vdc	5-57-5712-07 5-57-5716-07 5-57-5717-07	1 1 1	1 1 1	1 1 1	1 1 1	
	UU					No. 5 DC solenoid assembly No. 6 DC solenoid assembly No. 8 DC solenoid assembly		5-12-5557-00 5-12-5567-00 5-12-5589-00	1	1	1	1
		VV				No. 5 coil assembly	115 Vdc 230 Vdc	5-96-6516-33 5-96-6517-33	1 1			
			No. 6 coil assembly	115 Vdc 230 Vdc	5-96-6616-33 5-96-6617-33			1 1	1 1			
	No. 8 coil assembly			115 Vdc 230 Vdc	5-96-6816-33 5-96-6817-33				1 1			
		XX Y	DC switch assembly Arc suppression module		5-57-5501-00 5-57-5711-00	1 1	1 1	1 1	1 1			


*Consult factory for price and availability on complete support plate assemblies including solenoid.

TABLE 3: For 284UC and 286UC or TC Frame NEMA "C" Flange


Suffix Letter	Item Number	Description	Part Number	Used on Models
	B	Endplate	8-002-761-01	1-087-151-00, 1-087-155-00, 1-087-161-00 & 1-087-165-00
		Endplate	8-002-762-01	1-087-181-00 & 1-087-185-00
		Endplate and oil seal assembly	5-22-7027-00	1-087-152-00, 1-087-156-00, 1-087-162-00 & 1-087-166-00
		Endplate and oil seal assembly	5-22-7029-00	1-087-182-00 & 1-087-186-00
A	Vertical Mounting – above Motor			
	C	Endplate with pins	5-20-7022-00	1-087-151-00, 1-087-155-00, 1-087-161-00 & 1-087-165-00
		Endplate with pins	5-20-7023-00	1-087-181-00 & 1-087-185-00
		Endplate and seal assembly with pins	5-22-7028-00	1-087-152-00, 1-087-156-00, 1-087-162-00 & 1-087-166-00
		Endplate and seal assembly with pins	5-22-7030-00	1-087-182-00 & 1-087-186-00

Note: Brakes with a no. 5 or no. 6 solenoid manufactured before June 17, 1971 (prior to serial no. B-695468), or with a no. 8 solenoid manufactured before September 13, 1971 (prior to serial no. B-787975) contained a cast iron support plate (126) and lever arm (17). On subsequent brakes, these components have been changed to die cast aluminum. If either of the cast iron components need to be replaced, both must be replaced. However, in such a case, replacement of the entire support plate assembly (PP) is recommended.

Support Plate Assembly

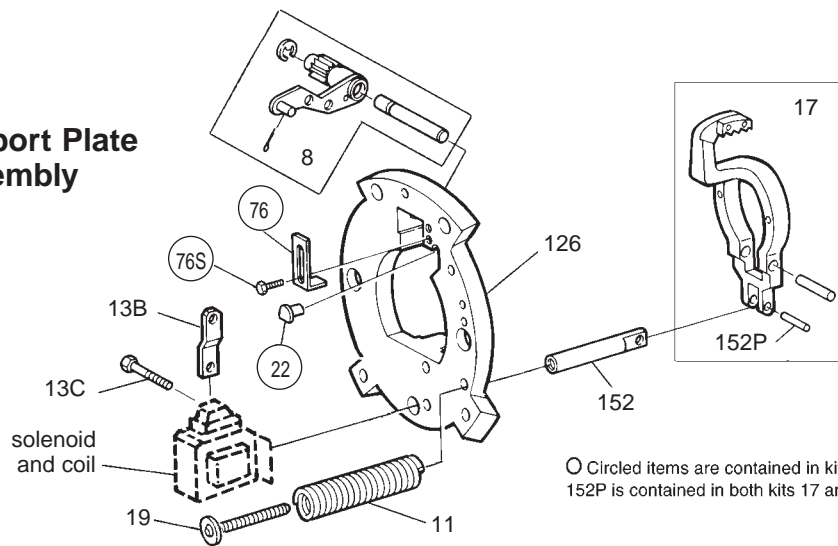


Solenoid and Coil Assembly

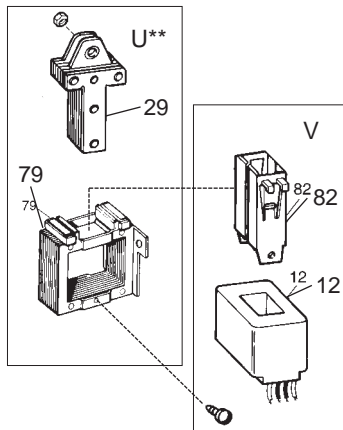

DC Components

With Electronic Switch

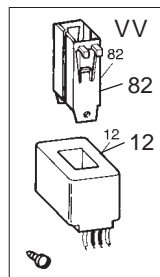

With Mechanical Switch


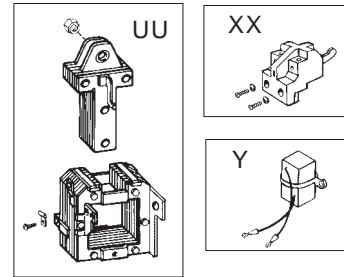


TABLE 4: Contents of Kits and Assemblies (contents may vary)

Item	Kit Description	Item	Kit Description	Item	Kit Description
A	Hardware kit (5-66-1007-00) 2 – External lead wire plugs 1 – Wrap spring stop 2 – Wrap spring stop screws 1 – Solenoid lever stop 3 – Support plate screws 3 – Support plate conical spring washers 3 – Support plate flat washers 2 – Housing studs 2 – Housing stud lock washers 2 – Housing nuts 1 – Release rod 1 – Release rod spring 1 – Release spring retainer 1 – Housing grommet 1 – Release knob	I	Vertical above spring and spacer kit (5-66-3171-00) 9 – Vertical above mounting springs 9 – Vertical above spring spacers	VV	Coil assembly (5-96-6XXX-33) DC coils 1 – Coil 2 – Plunger guides 2 – Plunger guide screws 4 – Wire fasteners
	Gasket and seal kit (5-66-1271-00) 1 – Endplate oil seal 1 – Housing seal 2 – Housing nut gaskets 1 – Housing to endplate gasket 3 – Lead wire bushings 1 – Pipe plug	K	Vertical below spring kit – green (5-66-3172-00) 3 – Vertical below springs - green Vertical below spring kit - red (5-66-3173-00) 3 – Vertical below springs - red	W	DC switch kit (5-57-57XX-07) 1 – Switch 1 – Mounting bracket 2 – Support plate mounting screws 2 – Switch mounting screws 2 – Nuts 3 – Crimp connectors
5	Pressure plate kit (5-66-8571-00) 1 – Pressure plate	8	Solenoid lever & pinion kit (5-66-7371-00) 1 – Solenoid lever and pinion assembly 1 – Cotter pin 1 – Solenoid lever pivot pin 1 – Pivot pin retaining ring	X	AC switch assembly (5-57-5528-00) 1 – Microswitch 1 – Mounting bracket 2 – Lead wire assemblies 2 – Mounting bracket screws 2 – Nuts 2 – Support plate screws 1 – Actuator arm 1 – Actuator arm mounting bolt 1 – Actuator arm nut
4	Friction disc kit - standard (5-66-8472-00) 1 – Friction disc - standard	17	Lever arm kit (5-66-7271-00) 1 – Lever arm assembly 1 – Lever arm pivot pin 1 – Spring tube pivot pin	XX	DC switch assembly (5-57-5501-00) 1 – DC switch 2 – Mounting screws 2 – Lock washers
	Friction disc kit - splined (5-66-8478-00) 1 – Friction disc -splined	19 and 152	Pressure spring tube kit (5-66-7471-00) 1 – Pressure spring tube 1 – Pressure spring screw 1 – Spring tube pivot pin	Y	Arc suppression module (5-57-5711-00) 1 – Arc suppression module 1 – Cable strap
3	Stationary disc kit (5-66-8372-00) 1 – Stationary disc (horizontal or vertical)	11	Pressure spring kit (5-66-307X-00) 1 – Pressure spring		
H	Vertical above mounting pin kit (5-66-337X-00) 3 – Vertical above mounting pins	U and UU	Solenoid kit (5-66-50X1-00) (5-12-55XX-00) 1 – Plunger 1 – Frame 3 – Solenoid mounting screws 3 – Solenoid mtg. conical spring washers 1 – Solenoid link nut		
		V	Coil kits (5-66-6XXX-33) AC coils 1 – Coil 2 – Plunger guides 2 – Plunger guide screws		